

C7 CARBON - INSTALLATION GUIDE

BRAND Chevrolet MODEL Camaro SS/RS/LT

YEAR 2016 and up


PART NAME Z11 style Side Skirt set

PART NUMBERS C7-CC6-ZL1-SS-CF

C7-CC6-ZL1-SS-FRP

C7-CC6-ZL1-SS-SB


C7-CC6-Z11-SS-GB

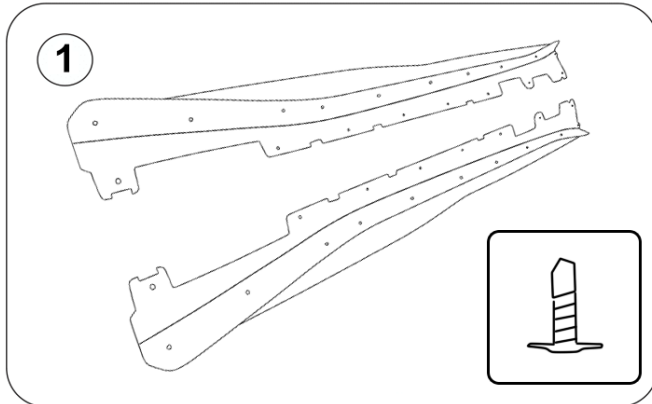

1.- Parts received in this package:


1x ZL1 Side Skirt set

36x self tapping screws

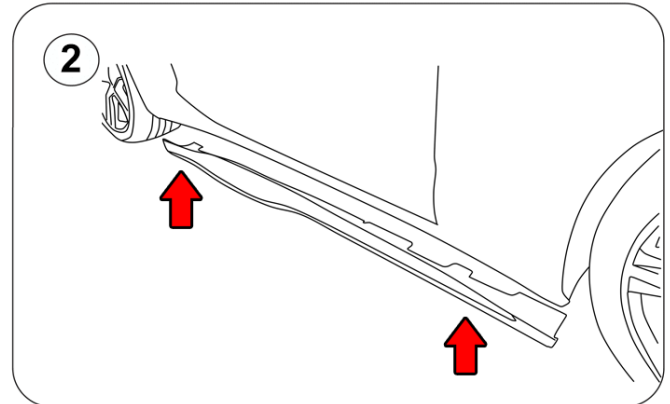


2.- Mount the sideskirt into it's respective place. Use any tools necessary to hold it in place.

Note: the sideskirt provides 18 pre-drilled holes which can be used all to install the sideskirt, but the number of holes you use, is under it's installer's discretion.

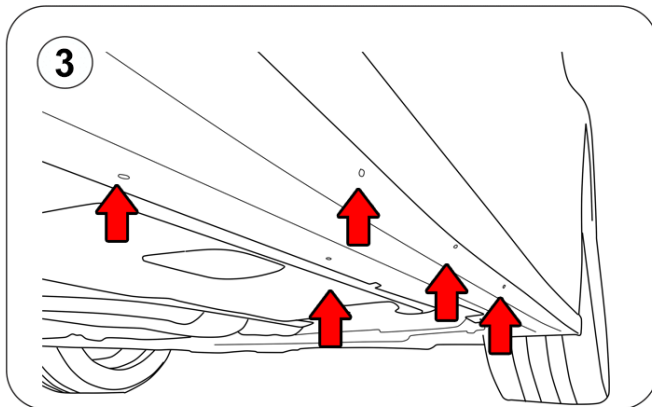

3.- According to the predrilled holes, drill the necessary holes wanted for the installation. if you don't drill the 18 holes, you can use double sided tape to improve the support toughness.

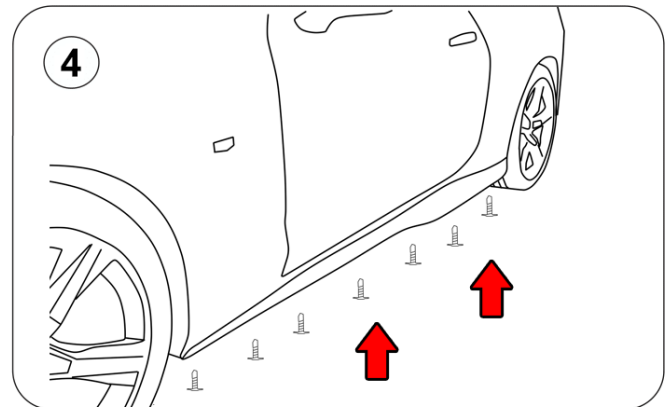

4.- Finish the installation by mounting the desired number of self tapping screws to the sideskirt.

Note: Pop rivets and other types of mounting hardware (not included) can be used instead of the self tapping screws